



Centerset Faucets

How to Install "Conventional Style" pop-up Rod into Faucet with for SpeedConnect Drain.

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1

M968915



1 CENTERSET FAUCETS

Tools Required




Adjustable Wrench


- Turn LIFT KNOB (1) in the counter clockwise direction, and remove from ROD (2). (Note: On some designs the KNOB (1) & ROD (2) are press fit together, so ROD (2) will detach from faucet when the KNOB (1) is turned).

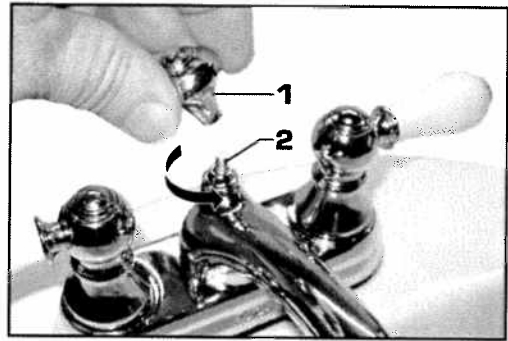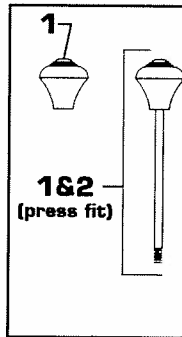


- Using adjustable wrench, turn the CABLE CONNECTOR (3) in the Clockwise direction (it is a reverse threaded) to loosen cable from the faucet base.

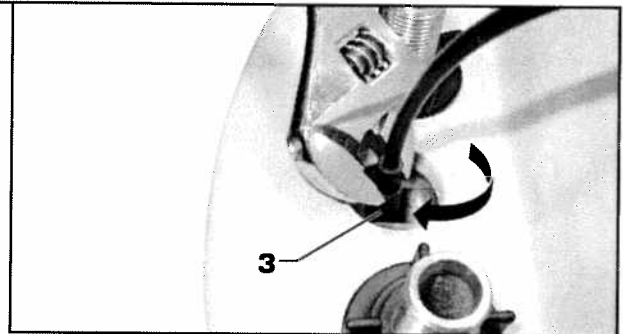

- Remove the CABLE CONNECTOR (3) from faucet.

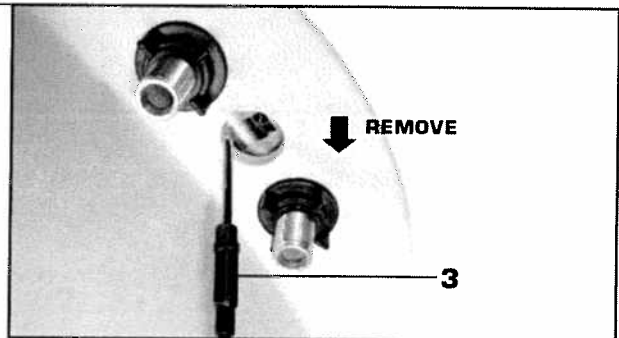

- Insert "Conventional Style" POP-UP ROD & KNOB (4) into the hole at the top of the faucet.

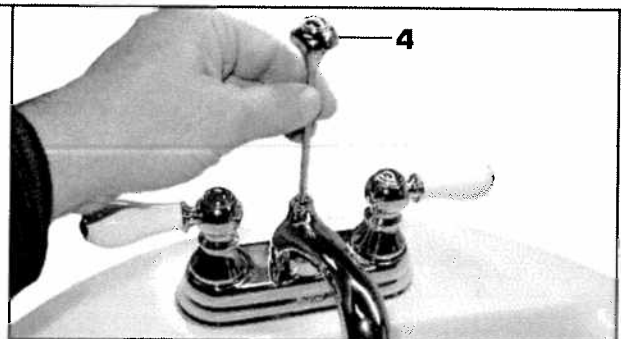



Widespread Faucets

How to Install "Conventional Style" pop-up Rod into Faucet with for SpeedConnect Drain.

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1

M968915



1 CENTERSET FAUCETS

Tools Required




Phillips Screwdriver


- Turn LIFT KNOB (1) in the counter clockwise direction, and remove from ROD (2). (Note: On some designs the KNOB (1) & ROD (2) are press fit together, so KNOB (1) & ROD (2) will detach from faucet when the KNOB (1) is turned).

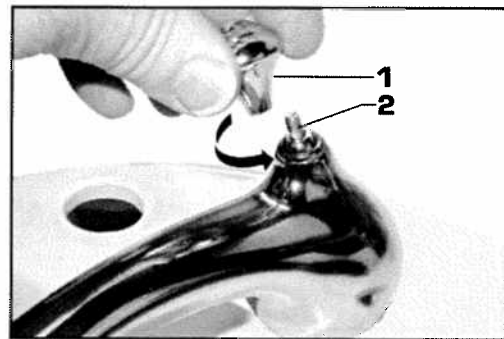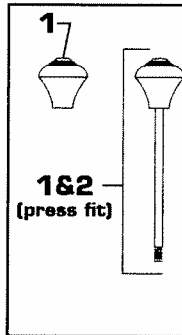

- From the bottom side of the SPOUT (3), remove the SCREWS (4) from the BRACKET (5) using a phillips head screwdriver.

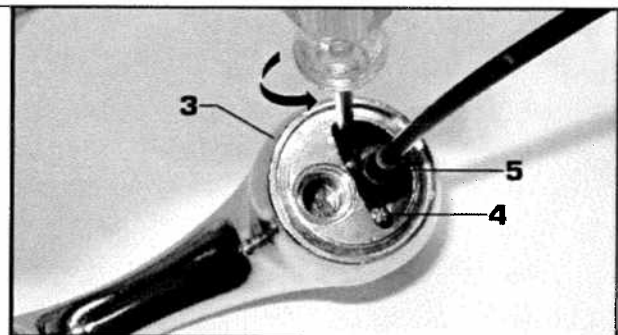

- Remove the BRACKET & CABLE (5) from the SPOUT (3).

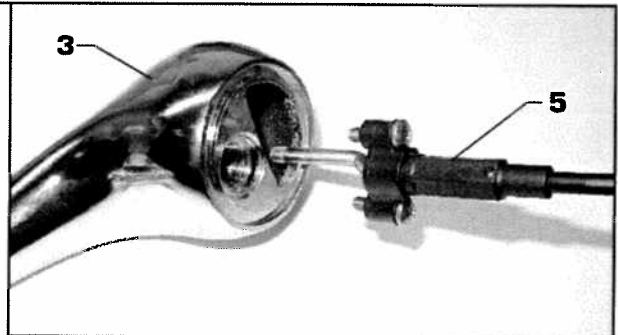

- Insert "Conventional Style" POP-UP ROD & KNOB (6) into the hole at the top of the faucet.

